




www.fanucworld.com

6064 Spindle Drives Alarm 01 on New Install

Make sure that the CN2 cable is plugged into the CN2 connector. This is on the top PCB, which is the one with the keypad. This PCB has a single connector on the left and a double stack connector on the right.

CN2 is the bottom plug - not the top.

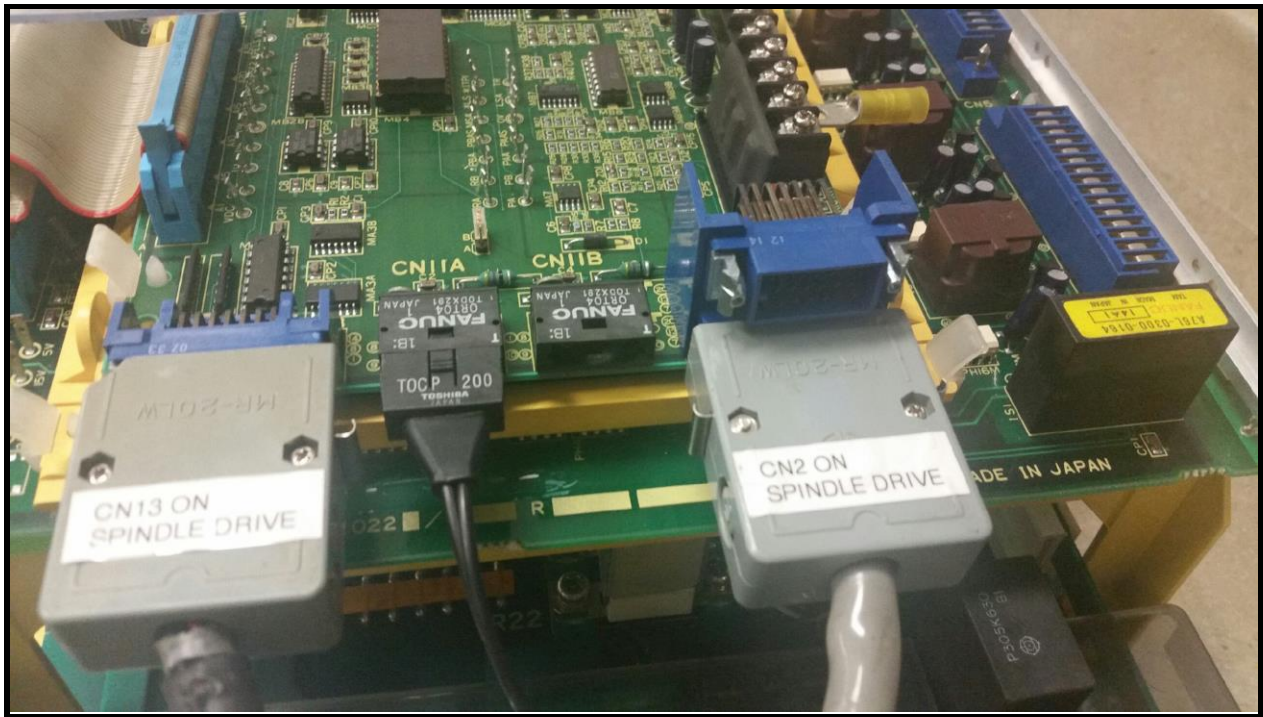

Disclaimer:

TIE assumes no liability whatsoever for any damages incurred by you or third parties resulting from errors in or omissions from the information included herein.

Updated 6/28/2018