

## **HOW TO EXPAND AND COLLAPSE (HORIZONTALLY AND VERTICALLY) THE SCREEN ON 90 AND 95 LCD'S**

1. Press the “OK” button to bring up the on menu screen.
2. Use the DOWN ARROW button to get to MODE, then press the “OK” button.
3. Use the UP ARROW button to get to SETTING (at the top of the on screen menu), then press the “OK” button.
4. Use the DOWN ARROW to go to SETTING2.
5. Hit the “OK” button to make the word SETTING turn yellow. This allows you to access and adjust HORIZONTAL and VERTICAL size and positioning.
6. Select the needed adjustment (listed below) and hit “OK”.
  - H POSITION will shift screen left and right.
  - V POSITION will shift the screen up and down.
  - H FREQUENCY to expand or collapse horizontally.
  - V FREQUENCY to expand or collapse vertically.

Then use the UP ARROW and DOWN ARROW to adjust size. When finished, hit “OK” and go to your next needed adjustment.

7. After making the needed adjustments, be sure to use the UP ARROW key to go to SAVE CURRENT SETTINGS and press the “OK” button.
8. You are now done and can select the ESC key to exit the menu.

