


A16B-2200-0700 & 0701 I/O PCB

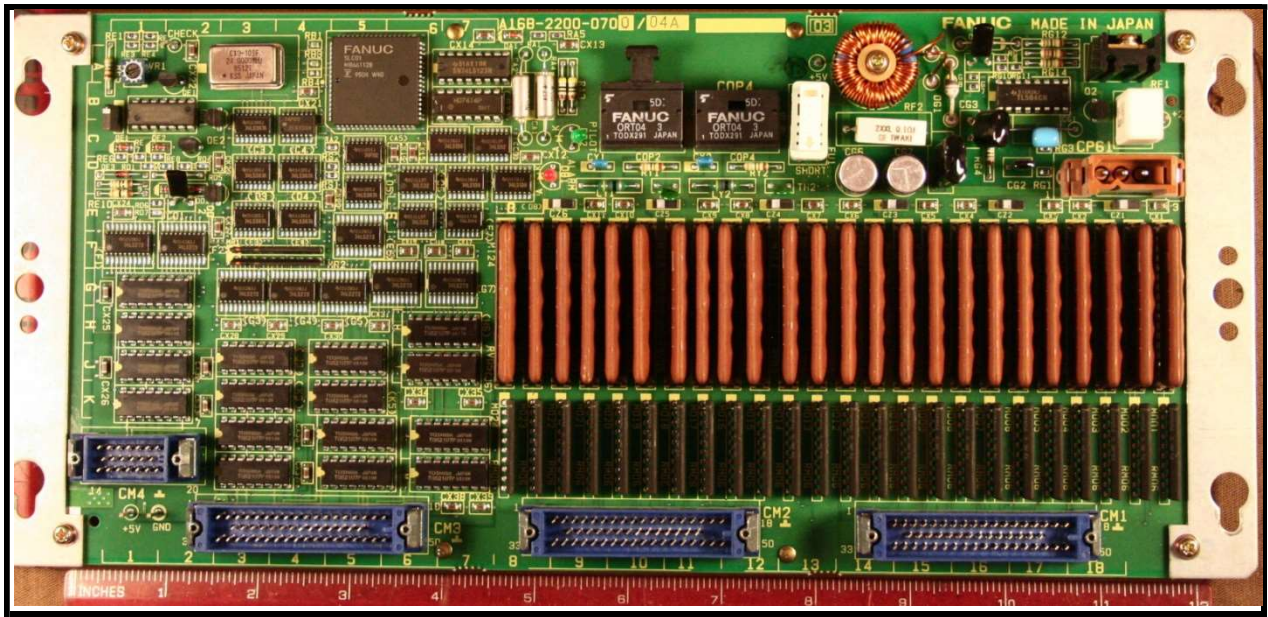

The VR1 pot in the upper left hand corner of this picture may have to be adjusted if the outputs are not working. The VR1 pot sets the firing level of the outputs. The firing level will vary from machine to machine. If you are having a problem with the outputs, then adjust VR1.