P: (615) 471-5070 F: (615) 793-3244



6073 and 6079 S1/S2 JUMPERS

If the drive is not operating correctly, please check the S1/S2 jumpers shown below. Incorrect setting can cause not ready alarms (dash on drive) or high current alarms (alarm 8 or 9 on drive).

S1 is for type A interface where the encoder cable goes back to control.

S2 is for type B interface where the encoder cable goes to the drive.

Note: There is no S1/S2 jumper on the three axis 6079 series (A06B-6079-H3XX).

